



6320 E Stassney Ln. Phone / 1.800.615.8350  
Austin, TX 78744 Email / [sales@feniex.com](mailto:sales@feniex.com)



---

## Q Series

### How to Program Q Serial Flash Patterns

Every Q Link light head comes with 5 available colors and over 20 patterns of twos. From on your Q Link module, let me show you how those are programmed. Before setting the flash patterns, I need to first set the zones of my 6 modules here, so I'll set 3 modules on one zone and 3 modules on another zone. I'll begin by connecting my zone programming wire to power. I'll set 3 modules on zone 8 and 3 modules on zone 9. I'll start by clicking zone 8, hover my magnet over the 3 modules, and then I'll click zone 9. Hover my magnet on the other 3 modules and I'm done. Now that I set my zones, I'll go ahead and move to programming my inputs. I'll select the input I wish to program. In this case, input 14. I'll select flashing my pattern, half, half, triple, and my brightness at a 100%. I'll then select the zone I wish to program and what colors I want to activate on that zone. I'll choose all 5 colors. I'll activate my other zone, zone 9 with those same 5 colors on now program my device. I now activate live mode and I can see my half half triple flash pattern flashing all 5 colors. You have over 20 flash patterns to pick from with 3 different intensity levels and 16 programmable zones.