


FENIX ONE

CONTROLLER | SIREN | FLEET MANAGER

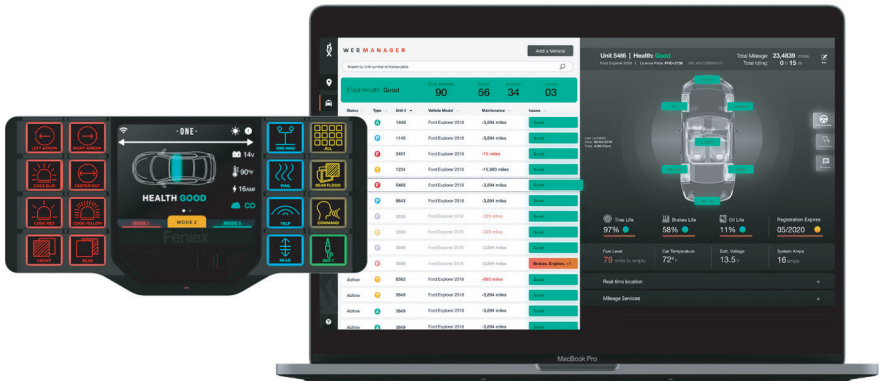

FENIX ONE CONTROLLER

QUICK REFERENCE GUIDE
F1-0121

Fenix University
pp. 03

Box Contents
pp. 04

Equipment Dimensions
pp. 05

Specifications
pp. 06



Fenix Product Copyrights This price List and the mentioned Fenix products include or describe copyrighted Fenix material. Laws in the United States and other countries preserve for Fenix Industries and its licensors certain exclusive rights for copyrighted material, including the exclusive right to copy, reproduce in any form, distribute and make derivative works of the copyrighted material. Accordingly, any copyrighted material of Fenix and its licensors contained herein or in the Fenix products described in this Price List may not be copied, produced, distributed, merged or modified, transmitted, stored in retrieval system or translated into any language or computer language, in any form or by any means, without prior written permission of Fenix Industries, Inc. Fenix and the stylized Fenix logo are registered in the U.S. Patent & Trademark Office.



SAFETY REGULATIONS & WARRANTY

Safety Regulations

The following provides all the information necessary to safely operate the previously listed products of Feniex Industries, Inc. Please read this manual thoroughly before installing or operating your new product in order to prevent any damage or injury. Failure to follow the listed instructions in this manual may result in damage to your products or personal injury.

- Proper installation of this product requires good knowledge of automotive systems, electronics and procedures.
- Please guarantee all vital components of the vehicle are not in danger of being damaged by drilling holes necessary for installation. Check all sides of the mounting surface before drilling any holes into the vehicle.
- Do not install this product in any way that interferes with the deployment of the air bag. Doing so may damage the effectiveness of the air bag and can lead to serious personal and vehicle injury. The installer will assume full responsibility of proper installation of the new unit.
- Please clean the mounting surface before installation of the unit when using tape, brackets, magnet, Velcro or suction cups.
- The product's ground wire must be connected directly to the Negative (-) battery post for effective use of the unit. Please follow all wiring guidelines provided to guarantee long lifespan and productivity. Failing to follow these instructions may result in damage to the product.

Warranty

Feniex Industries, Inc. warranties to the original purchaser that all our products shall be free from defects in material and workmanship. Feniex Industries' speakers, sirens, rocker panels, AM600 Beacons, Torch Lights, AI lightbars, AI Cubes, AM900 Work Lights, 8.5" Dome Lights, flashlights, Remote Spot Lights and controllers are warranted for 2 years from the manufacturing date. In addition, all other products are warranted for 5 years from the manufacturing date. .

If a warranty problem occurs, please contact customer support at 1.800.615.8350 or visit the web site at www.Feniex.com.

If the product needs to be returned for repair or replacement, call our customer support line to receive a return merchandise authorization number.

Operational times are from 10 a.m. to 5 p.m. central time, Monday through Friday. Please do not send in product without contacting support first for a RMA number.

Service After Expiration

Feniex Industries will still provide service for all products after expiration of the warranty. For any issues, call the customer support line. In some instances it may be necessary for the product to be shipped, freight prepaid and insured for loss or damage to Feniex headquarters.

Warning! Utilizing non-factory screws and mounting brackets may result in loss of warranty coverage.

Copyright

This instruction manual and the Feniex products described in this instruction manual may include or describe copyrighted Feniex material. Laws in the United States and other countries preserve for Feniex Industries and its licensors certain exclusive rights for copyrighted material, including the exclusive right to copy, reproduce in any form, distribute and make derivative works of the copyrighted material. Accordingly, any copyrighted material of Feniex and its licensors contained herein or in the Feniex products described in this instruction manual may not be copied, reproduced, distributed, merged or modified in any manner without the express written permission of Feniex Industries, Inc.

Feniex Product Copyrights

The products described in this document are the property of Feniex Industries, Inc. It is furnished by express license agreement only and may be used only in accordance with the terms of such an agreement. Products and documentation are copyrighted materials. Making unauthorized copies is prohibited by law. No part of the product or documentation may be reproduced, transmitted, transcribed, stored in retrieval system or translated into any language or computer language, in any form or by any means, without prior permission from Feniex Industries, Inc.

▲ FENIEX UNIVERSITY

Visit Feniex University to learn how to install, program and mount your Feniex One.



<https://feniexuniversity.com/>

Visit Feniex University to watch in-depth tutorials on the topics listed below:



▲ CONTROLLER & RELAY VIDEO TOPICS:

Introduction to the Feniex One controller and relay

What comes with the Feniex One?

Mounting the controller and relay

The functionalities of the controller

Functionalities of the siren relay

Wiring up and powering the Feniex One

Servicing the Feniex One?

Understanding the software interface

Programming the 21 button and slide switch

Programming the 8 inputs

Programming the OBD2 plug-in

Programming the 32 outputs

Programming the dual-tone 200W siren

Programming and wiring the Quad Serial port

Programming the data link ports

Programming the global vehicle sync

▲ SOFTWARE VIDEO TOPICS:

Understanding the Fleet Manager

Understanding the Fleet Tracker



▲ BOX CONTENTS


Component	Quantity	Component	Qty.
Feniex One Relay	1	Button Legend Sheets	4
Feniex One Controller	1	16 pin Wire Harness	2
Antenna	1	8 pin Wire Harness	2
USB Cable	1	6 pin Wire Harness	1
Ethernet Cable	1	Power Cable Harness	1
U-Bracket	1	14pin Controller to Relay	1
8 pin Input Wire Harness	1	Magnet	1
Microphone	1		





EQUIPMENT DIMENSIONS

Relay	8" x 6.25" x 2.44"	Controller	7.25" x 1.5" x 3.13"
-------	--------------------	------------	----------------------

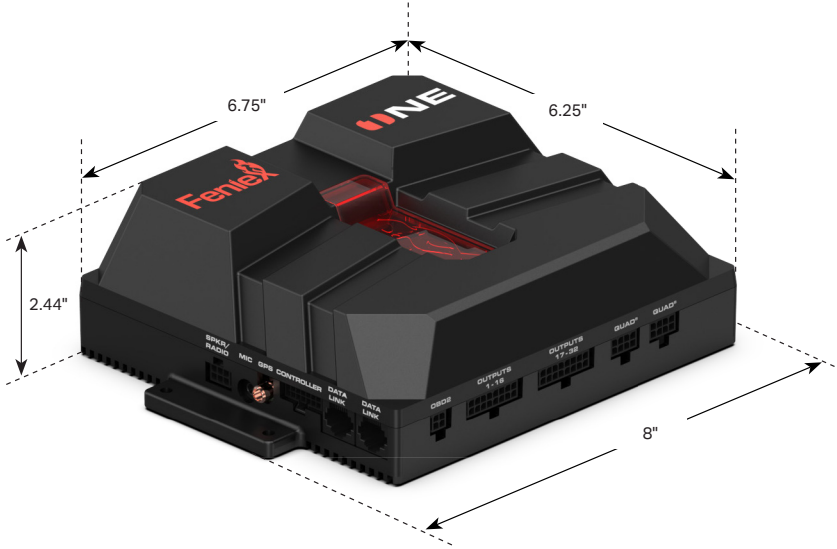



SPECIFICATIONS

Warranty	2 years
Input Voltage	9-16 V DC
Current Draw	80 Amps
Built-in Relay	Yes
Standby Current*	1 Amp*
Fuse	125% circuit load

Important: Required to use a power disconnect device to disconnect the system from vehicle battery. Failure to do so can deplete the vehicle's battery.

PROGRAMMABLE INPUTS:

There are 8 inputs and 32 outputs on the relay. Input 1 is a system input for dedicated ignition.

AMPS PER OUTPUT

Each output is rated at 5 Amps.

Note: Each output will supply 5 amps. The output will turn off when this is exceeded. If this occurs you can tie multiple outputs together to get your desired current. Also, note the total maximum current when all outputs are used cannot exceed 60 Amps.

AMPS PER BLOCK

There are 15 Amps per block of outputs:

Block1 :Outputs 1-8


Block2 :Outputs 9-16

Block3 :Outputs 17-24

Block4 :Outputs 25-32

MAXIMUM OUTPUT


The maximum output is 60 Amps with all outputs.

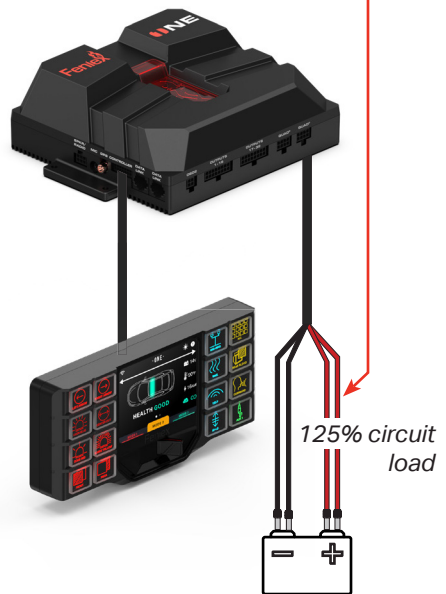



▲ WIRING HARNESS: OUTPUT WIRE HARNESS 1-16

■ WIRING HARNESS: OUTPUT WIRE HARNESS

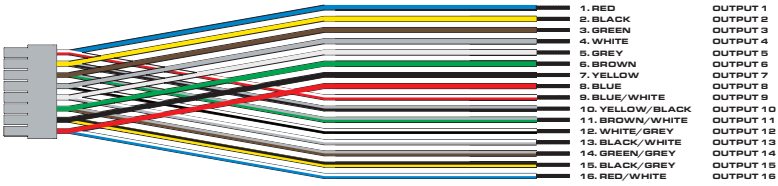


POS.	WIRE FUNCTION	COLOR	GAUGE	AMPS	NOTES:
1	Output 1	Red	18G	15Amps	
2	Output 2	Black	18G		
3	Output 3	Green	18G		
4	Output 4	White	18G		
5	Output 5	Grey	18G		
6	Output 6	Brown	18G		
7	Output 7	Yellow	18G		
8	Output 8	Blue	18G		
9	Output 9	Blue/White	18G	15Amps	
10	Output 10	Yellow/Black	18G		
11	Output 11	Brown/White	18G		
12	Output 12	White/Grey	18G		
13	Output 13	Black/White	18G		
14	Output 14	Green/Grey	18G		
15	Output 15	Black/Grey	18G		
16	Output 16	Red/White	18G		

Note: Each output will supply 5 amps. The output will turn off when this is exceeded. If this occurs you can tie multiple outputs together to get your desired current. Also, note the total maximum current when all outputs are used cannot exceed 60 Amps.



▲ WIRING HARNESS: OUTPUT WIRE HARNESS 17-32

■ WIRING HARNESS: OUTPUT WIRE HARNESS

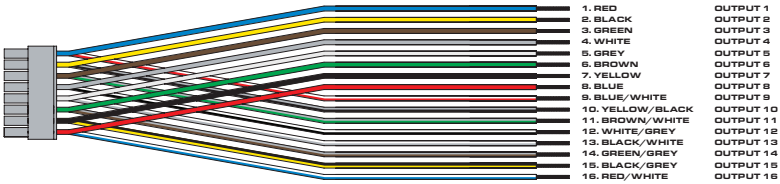

POS.	WIRE FUNCTION	COLOR	GAUGE	AMPS	NOTES:
1	Output 17	Red	18g	15AMPS	
2	Output 18	Black	18g		
3	Output 19	Green	18g		
4	Output 20	White	18g		
5	Output 21	Grey	18g		
6	Output 22	Brown	18g		
7	Output 23	Yellow	18g		
8	Output 24	Blue	18g		
9	Output 25	Blue/White	18g	15AMPS	
10	Output 26	Yellow/Black	18g		
11	Output 27	Brown/White	18g		
12	Output 28	White/Grey	18g		
13	Output 29	Black/White	18g		
14	Output 30	Green/Grey	18g		
15	Output 31	Black/Grey	18g		
16	Output 32	Red/White	18g		

Note: Each output will supply 5 amps. The output will turn off when this is exceeded. If this occurs you can tie multiple outputs together to get your desired current. Also, note the total maximum current when all outputs are used cannot exceed 60 Amps.



▲ WIRING HARNESS: INPUT WIRE HARNESS

The Feniex One input wiring harness can come in two different versions. Check your wiring harness and follow the correct wiring diagram below.

Positive or negative activation can be switched using the Feniex One Software. Use the link below for video instructions:

<https://tinyurl.com/4frsp3z8>

■ WIRING HARNESS: INPUT WIRE HARNESS VERSION A

All inputs can be configured in software to activate with battery or ground



POS.	WIRE FUNCTION	COLOR	GUAGE	+/- ACT.	NOTES:
1	Input 1 [A]	Yellow	22G	- / +	Ignition. Default setting to (-)
2	Input 2 [B]	Brown	24G	+ / -	Default setting to (-)
3	Input 3 [C]	White	24G	+ / -	Default setting to (-)
4	Input 4 [D]	Blue	24G	+ / -	Default setting to (-)
5	Input 5 [E]	Green	24G	+ / -	Default setting to (-)
6	Input 6 [F]	Black	24G	+ / -	Default setting to (-)
7	Input 7 [G]	Grey	24G	+ / -	Default setting to (-)
8	Input 8 [H]	Red	24G	+ / -	Default setting to (-)

■ WIRING HARNESS: INPUT WIRE HARNESS VERSION B

All inputs can be configured in software to activate with battery or ground



POS.	WIRE FUNCTION	COLOR	GUAGE	+/- ACT.	NOTES:
1	Input 1 [A]	Yellow	22G	- / +	Ignition. Default setting to (-)
2	Input 2 [B]	Brown	24G	- / +	Default setting to (-)
3	Input 3 [C]	White	24G	- / +	Default setting to (-)
4	Input 4 [D]	Blue	24G	- / +	Default setting to (-)
5	Input 5 [E]	Green	24G	- / +	Default setting to (-)
6	Input 6 [F]	Orange	24G	- / +	Default setting to (-)
7	Input 7 [G]	Grey	24G	- / +	Default setting to (-)
8	Input 8 [H]	Pink	24G	- / +	Default setting to (-)



▲ WIRING HARNESS: SIREN WIRE HARNESS

■ WIRING HARNESS: SIREN WIRE HARNESS



POS.	WIRE FUNCTION	COLOR	GAUGE	NOTES:
1	Remote Rebroadcast In - A	Red	24G	
2	Speaker 1 Out - A	Brown	24G	
3	Speaker 2 Out - A	Brown	24G	
4	Remote Rebroadcast In - B	Green	24G	
5	Speaker 1 Out - B	Blue	24G	
6	Speaker 2 Out - B	Blue	24G	

▲ WIRING HARNESS: DATA WIRE HARNESS

■ WIRING HARNESS: DATA WIRE HARNESS

Connect maximum of 6 Quad products per pair of green + white quad channels



1. GREEN
2. GREEN
3. GREEN
4. GREEN
5. WHITE
6. WHITE
7. WHITE
8. WHITE

QUAD CHANNEL 1 - Y
QUAD CHANNEL 2 - Y
QUAD CHANNEL 3 - Y
QUAD CHANNEL 4 - Y
QUAD CHANNEL 1 - Z
QUAD CHANNEL 2 - Z
QUAD CHANNEL 3 - Z
QUAD CHANNEL 4 - Z




1. GREEN
2. GREEN
3. GREEN
4. GREEN
5. WHITE
6. WHITE
7. WHITE
8. WHITE

QUAD CHANNEL 5 - Y
QUAD CHANNEL 6 - Y
QUAD CHANNEL 7 - Y
QUAD CHANNEL 8 - Y
QUAD CHANNEL 5 - Z
QUAD CHANNEL 6 - Z
QUAD CHANNEL 7 - Z
QUAD CHANNEL 8 - Z

POS.	WIRE FUNCTION	COLOR	GAUGE	NOTES:
1	Quad Channel 1 - Y	Green	24G	
2	Quad Channel 2 - Y	Green	24G	
3	Quad Channel 3 - Y	Green	24G	
4	Quad Channel 4 - Y	Green	24G	
5	Quad Channel 1 - Z	White	24G	
6	Quad Channel 2 - Z	White	24G	
7	Quad Channel 3 - Z	White	24G	
8	Quad Channel 4 - Z	White	24G	
1	Quad Channel 5 - Y	Green	24G	
2	Quad Channel 6 - Y	Green	24G	
3	Quad Channel 7 - Y	Green	24G	
4	Quad Channel 8 - Y	Green	24G	
5	Quad Channel 5 - Z	White	24G	
6	Quad Channel 6 - Z	White	24G	
7	Quad Channel 7 - Z	White	24G	
8	Quad Channel 8 - Z	White	24G	



FENIEX ONE SCHEMATIC

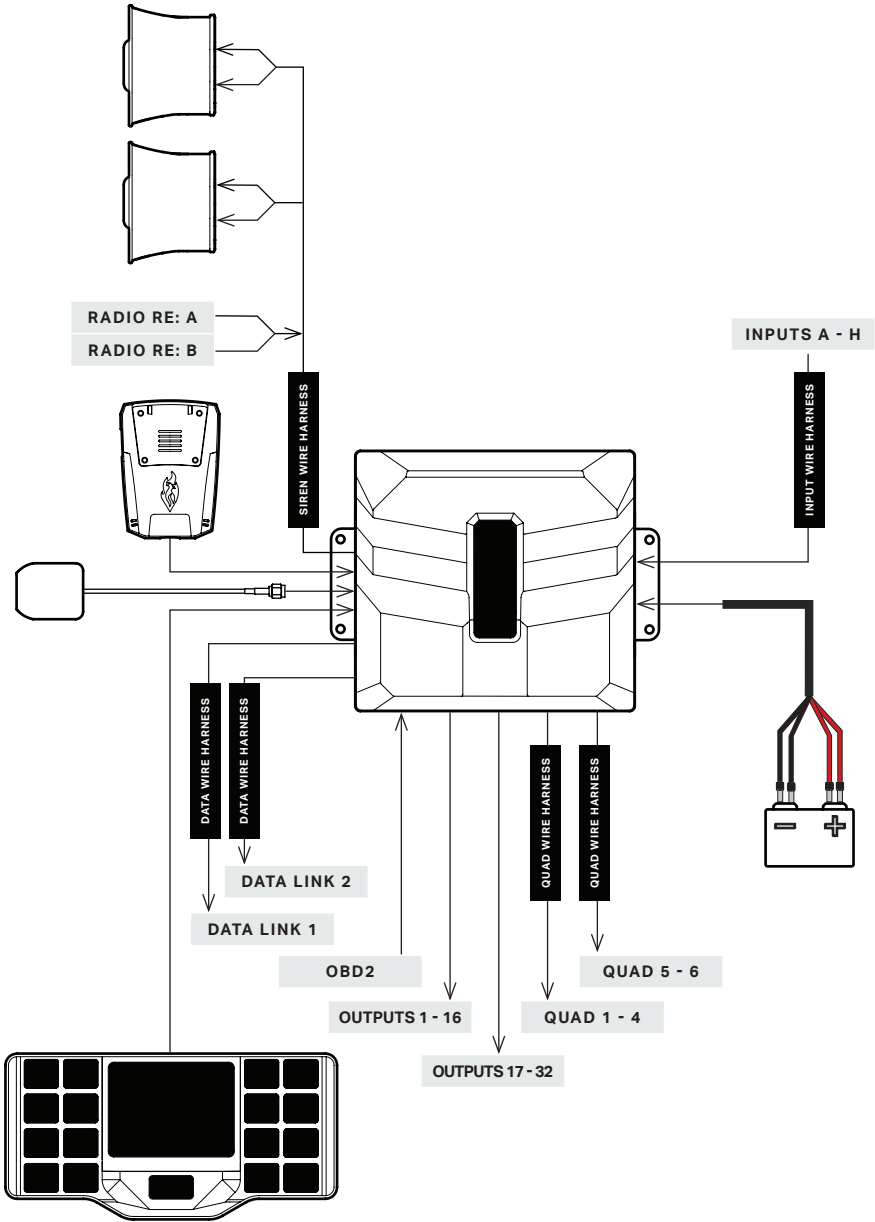


DATA WIRE: DAISY CHAIN INSTRUCTIONS

When using the daisy chain to connect your Quad products, only connect 6 Quad products to each green/white data wire set. Do not mix paired green/white wires. Twisted pair cables recommend 7 turns per foot.

WIRING HARNESS: CORRECT WIRING

Connect maximum of 6 Quad products per pair of green + white quad channels

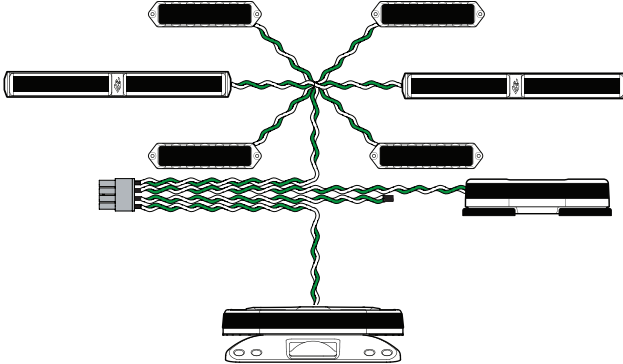

WIRING HARNESS: INCORRECT WIRING

Below illustrates 8 Quad products connected to a pair of green + white quad channels.

